


## Blooming Water Heater Replacement Guide Models NB-R1063 & NB-1163


Step 1: Unscrew the two Philips head screws on the base of the unit, underneath the seat. You'll need to place the bidet unit on a flat surface and raise the lid and seat to see these screws. Also, unscrew the single Philips head screw located on the back of the unit. Set these aside for reassembly later.

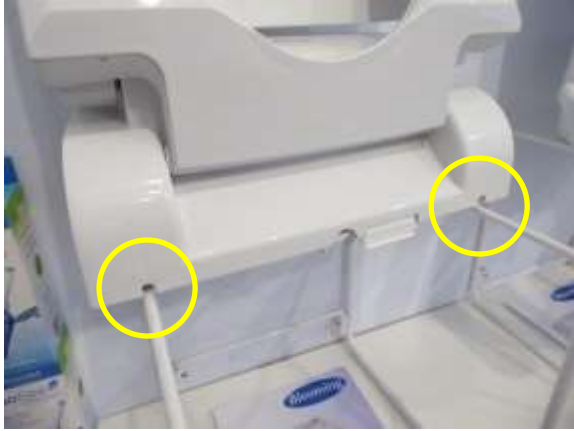


Step 2: Gently pry the upper and lower housings apart by inserting a flat-bladed screwdriver in the areas indicated here.




Step 3: Lay the upper housing back behind the lower housing, keeping the lower housing flat so you can work on it.

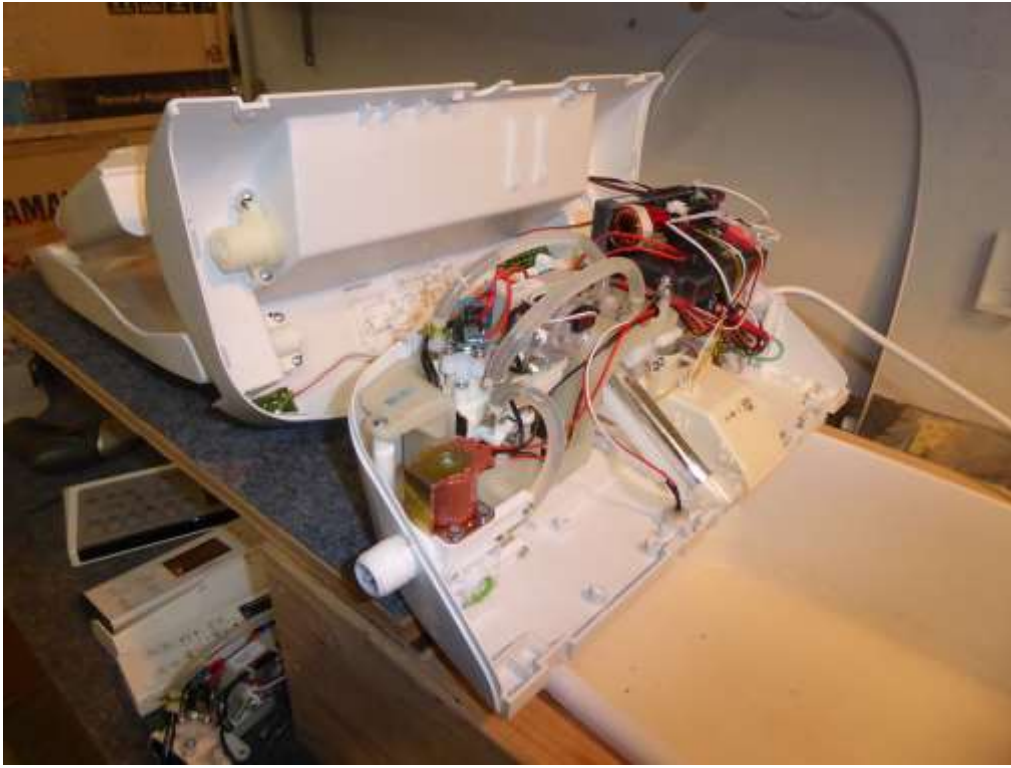


Step 4: Untwist and set aside, the black tie holding the two water hoses together at the top of the heater assembly.

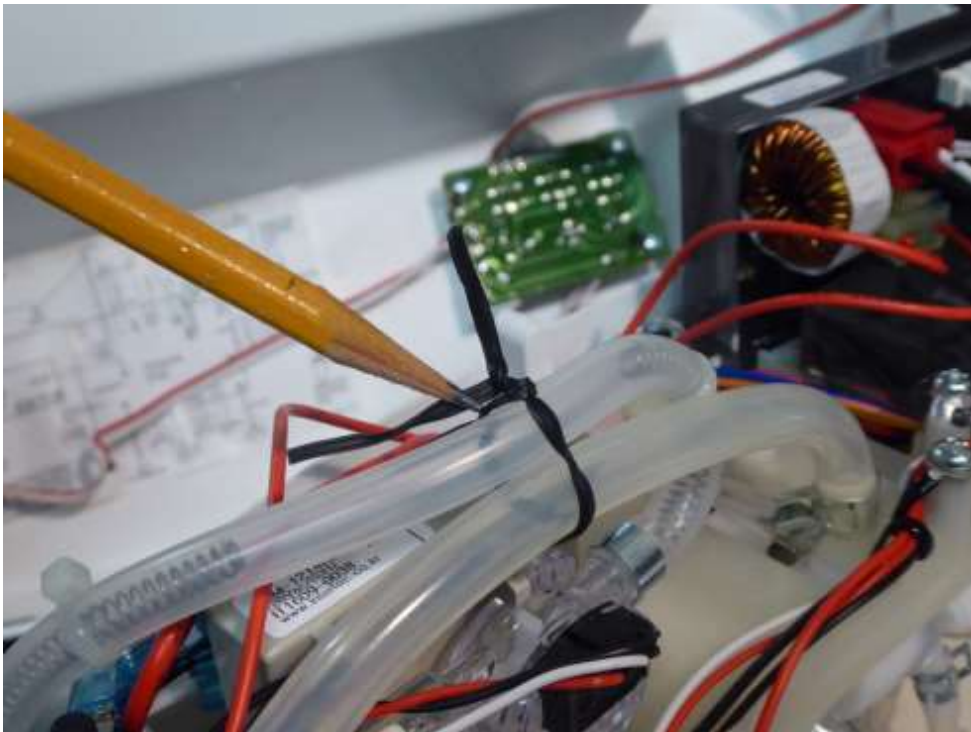



Step 5: Using needle nose pliers, squeeze the two hose clamps to release pressure on the hoses and remove the hoses from their respective nipples on the heater. Remove the lower hose first to give you better access to the upper hose.

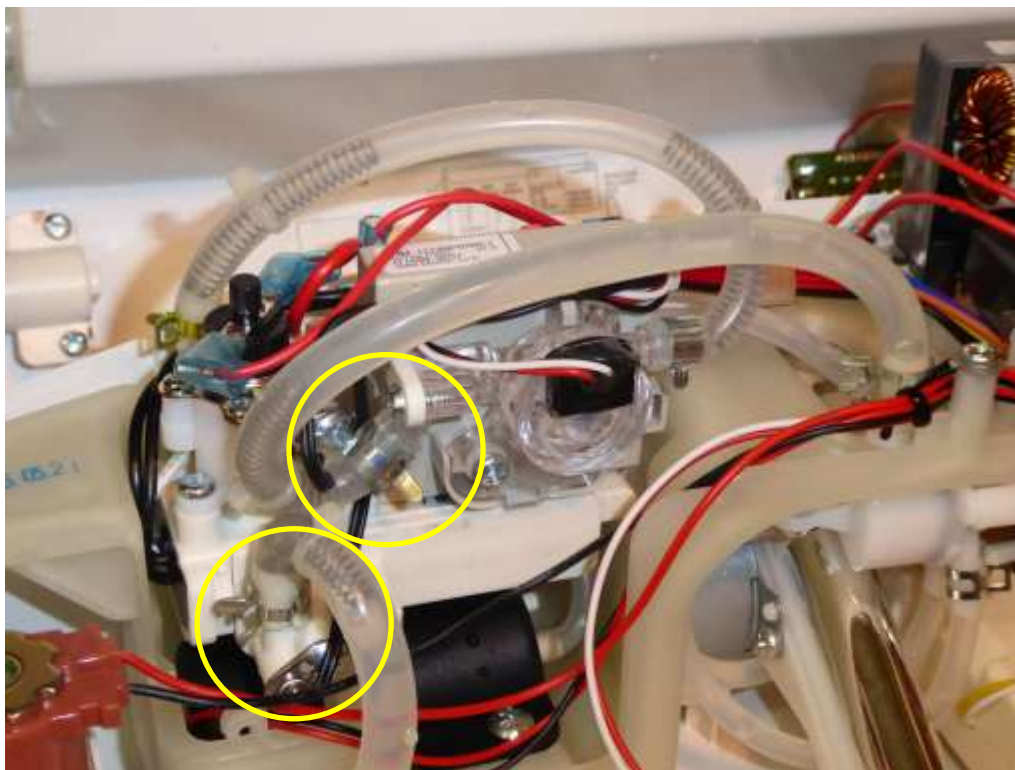


Step 6: You have two red wires to disconnect by pulling on the plastic boot surrounding the connectors.

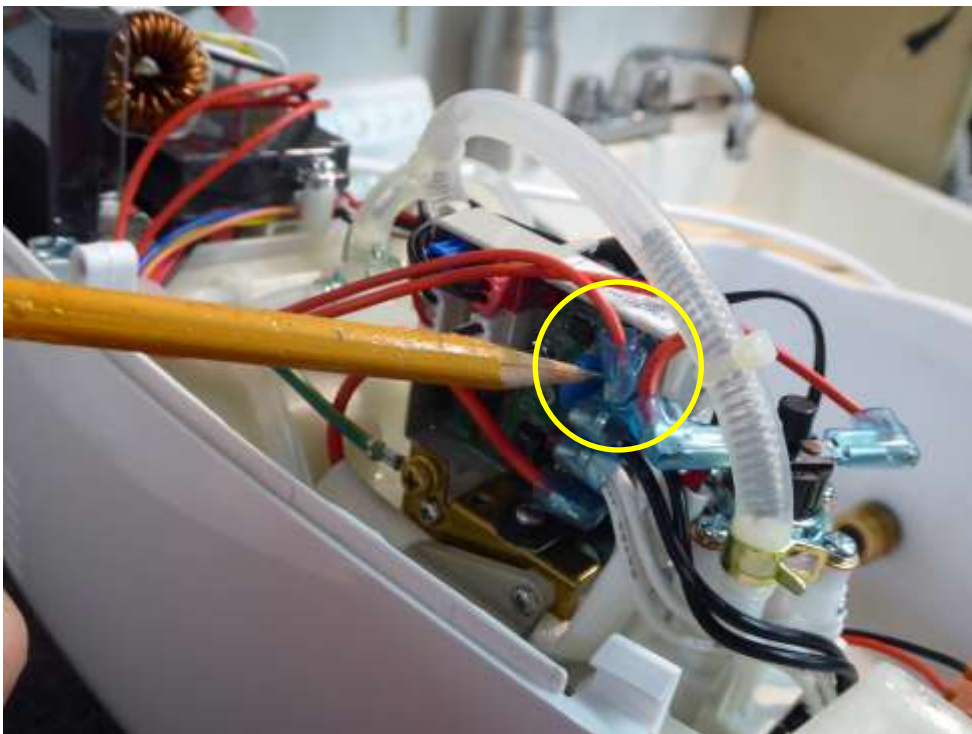


Step 7: Unscrew the two Phillips headed screws that hold the heater assembly to the base.

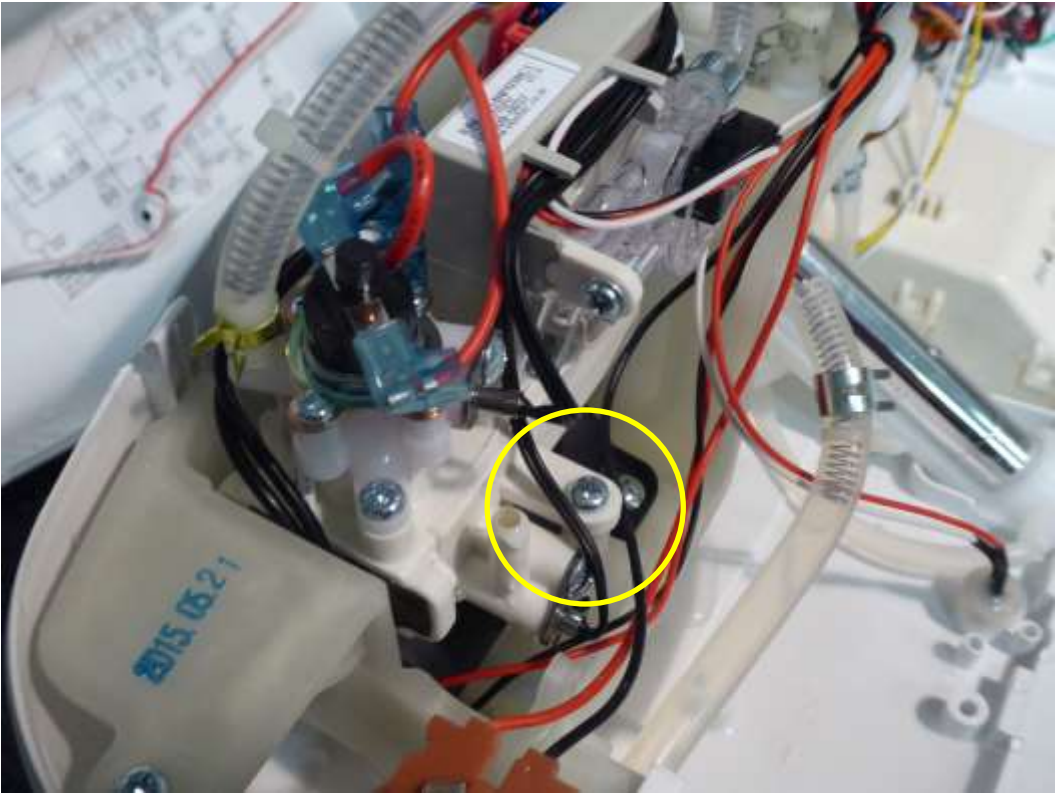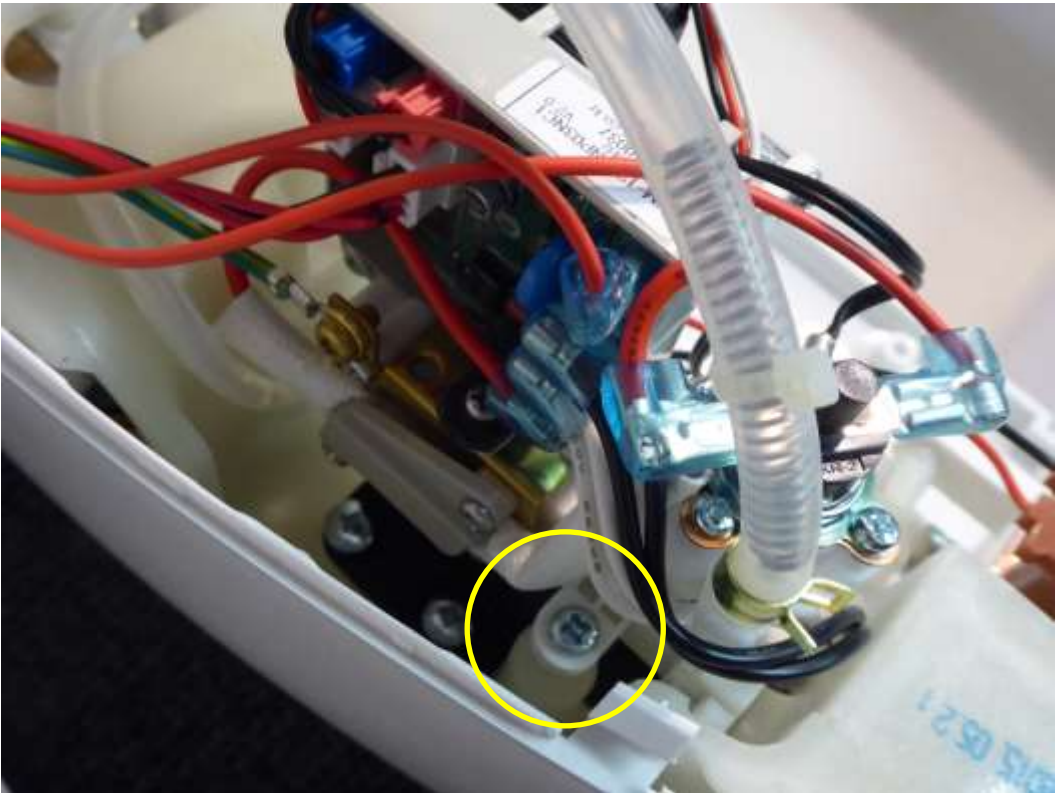


Step 8: Unplug the 4 wire plug-in connector on the circuit board by pinching it with your fingers and pulling outwards.

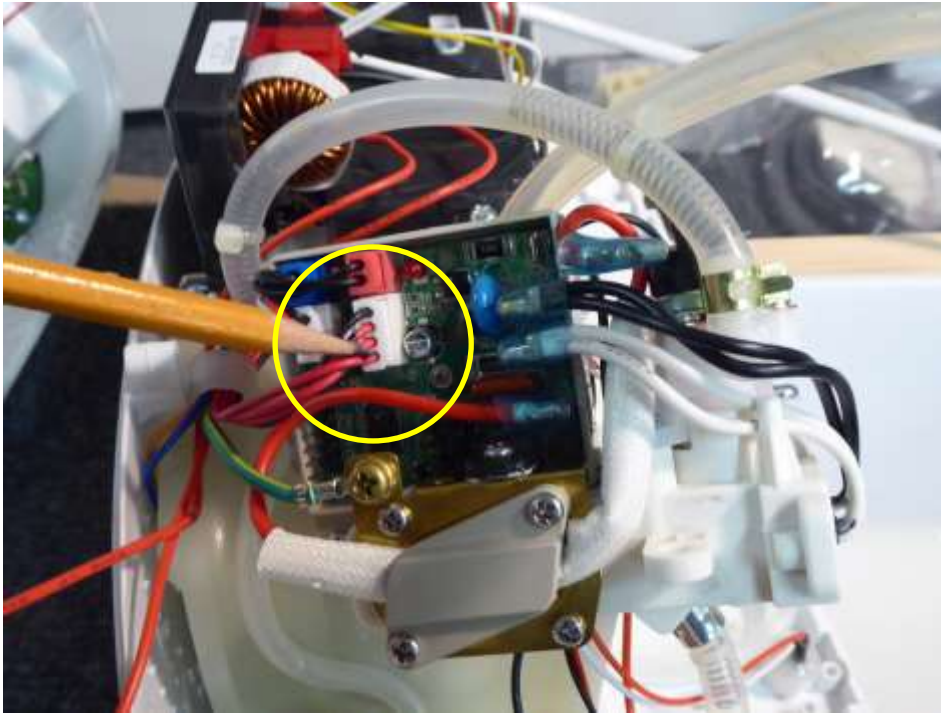


Step 9: Unscrew the phillips head ground screw, taking care not to lose the flat and lock washers. At this point the heater assembly will lift out. We recommend keeping your screwdriver on the ground screw and installing it into the new heater assembly.

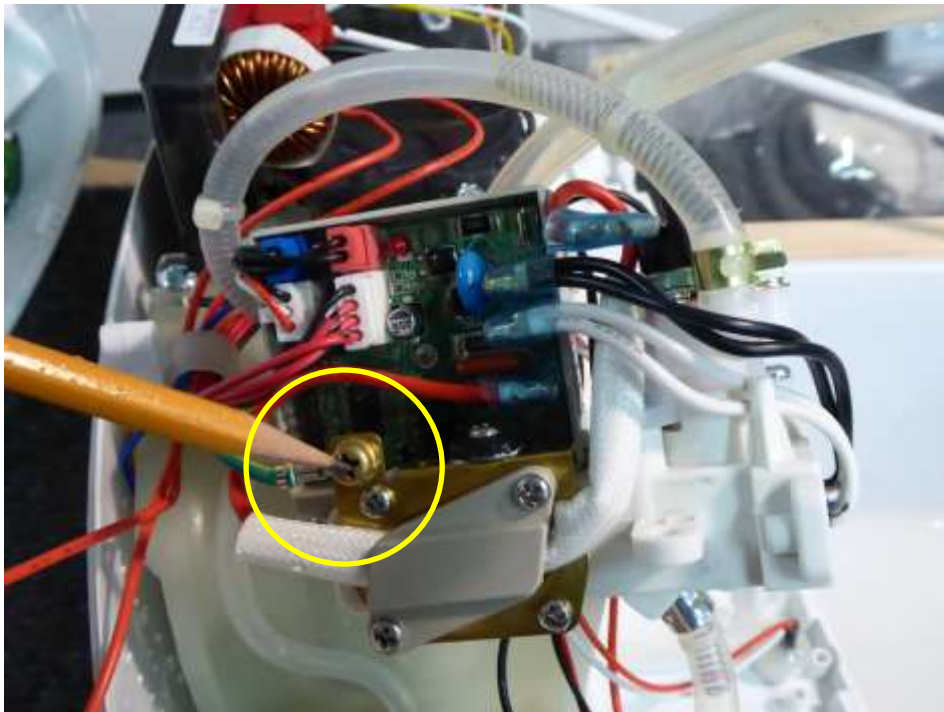

Step 10: Reinstall the two Phillips head screws you removed in Step 8.

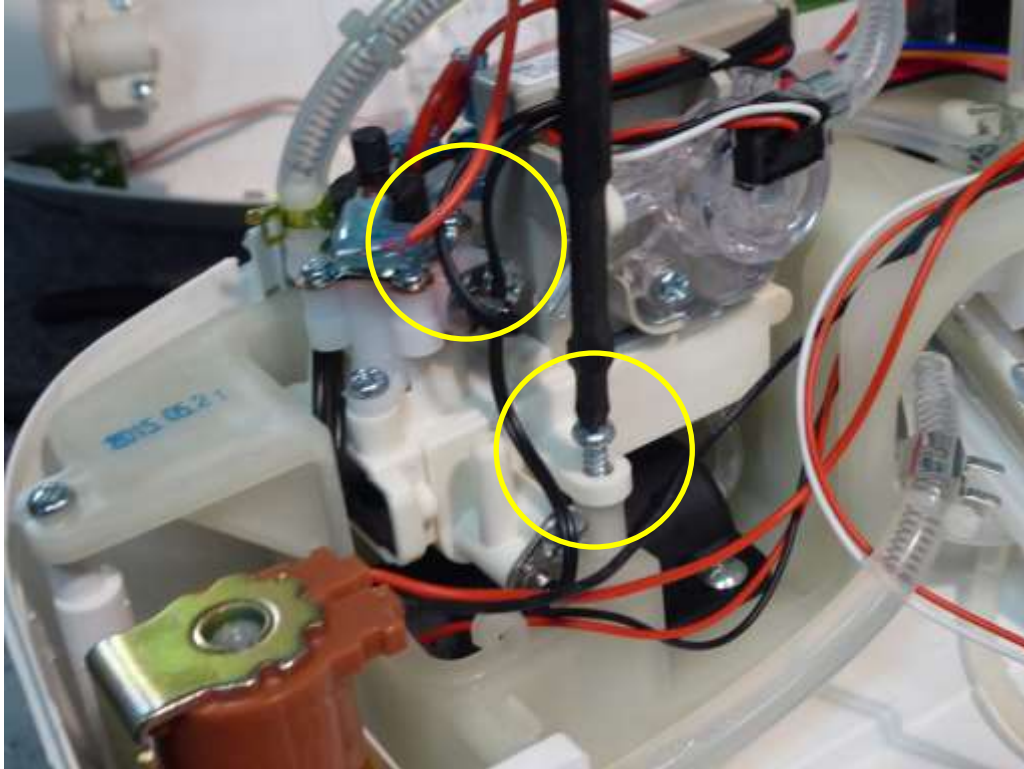

Step 11: Reattach the upper hose you removed in Step 5, to the heater assembly.

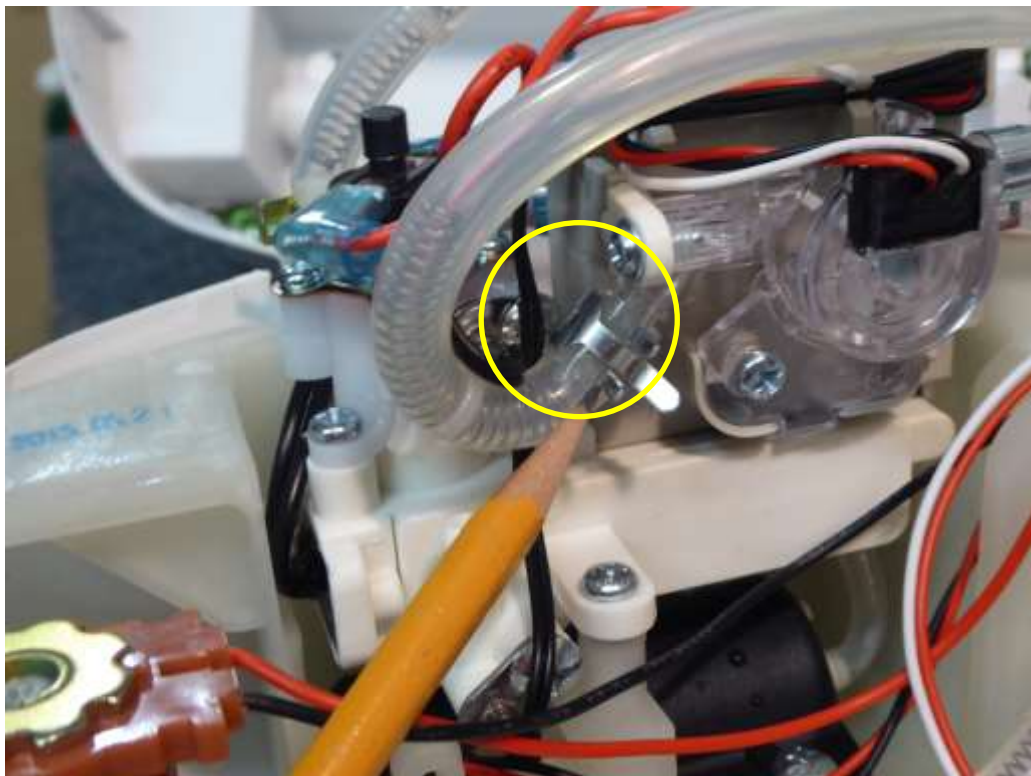


Step 12: Reattach the lower hose to the heater assembly.



Step 13: Reattach the two red wires removed in Step 7 and the 4-wire plug connector removed in Step 9. Feed the longer red wire underneath the water hose as seen in the picture below.

Step 14: Attach the black twist tie around the two water lines.

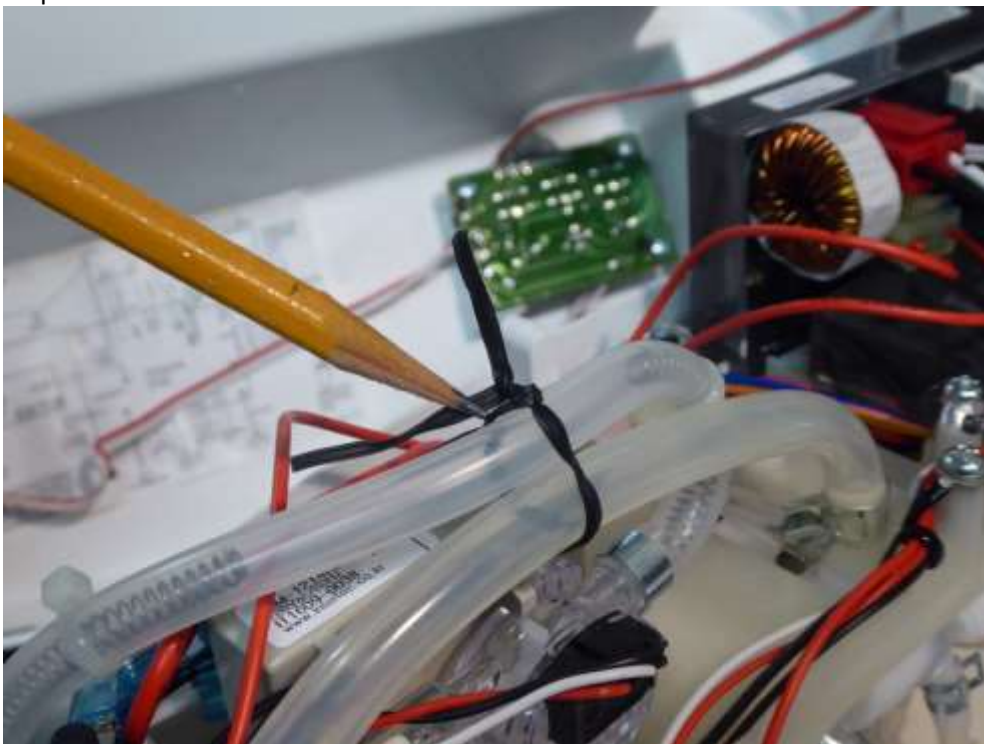



Step 15: Reassemble the upper and lower housing, being careful not to pinch any wires. The housing will “snap” into place when aligned correctly. You will need to push on the bottom of the lower housing, close to the pry points, to get it to snap into place. Reattach the three Phillips head screws to the base (reversing Step 1). Check to see the upper and lower housing are mated together properly and you’re done.